

Polaroid Polavision Land Player


Wonderfully new,
remarkably simple.

Discover for yourself...



What you do

1. Plug the power cord into a standard 115 volt 60 cycle electrical outlet. The cord is inside the rear door.*
2. Lift open the cassette compartment cover as shown below.
3. Insert the cassette by aligning the blue and yellow bars. Push the cassette down to start the player.

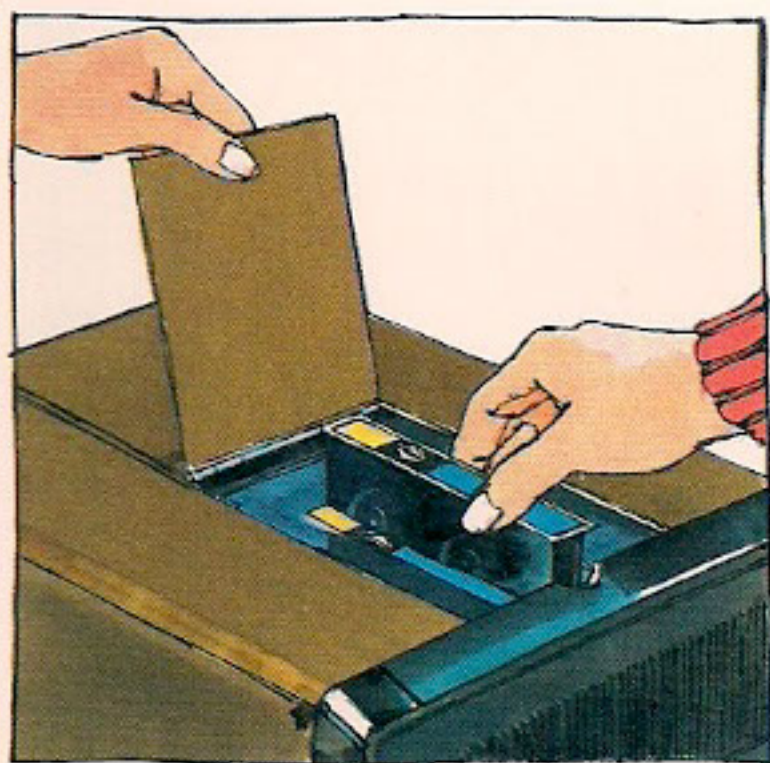


What the player does

When a cassette goes into the player for the first time, the screen remains dark for about 90 seconds. Then, full color "living images" fill the screen.

When you've seen the entire cassette, the screen darkens. About 15 seconds later, the player ejects the cassette and shuts off, automatically. To replay the cassette, push it down again.

RERUN appears in the bottom opening of the cassette, when it has played at least once.

Viewing hints

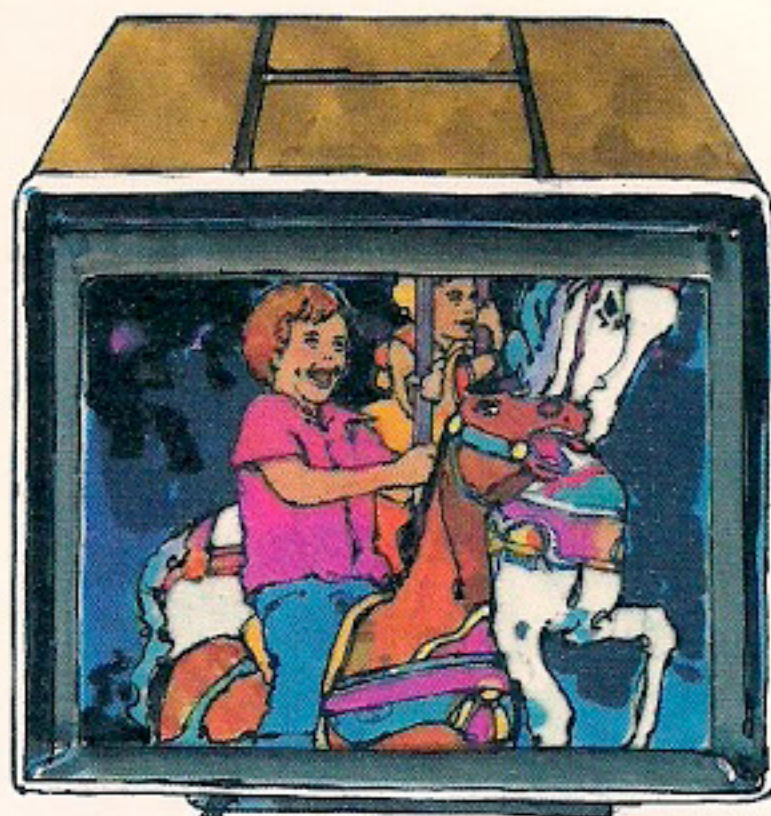

- You'll enjoy the best viewing when you're about 8 to 10 feet from the center of the screen, with the screen slightly below eye level.

If you're too far above, below or to one side of the screen, the image will tend to lose its uniform brightness.


- Although the image is vivid in normal lighting, try lowering the room light. You may prefer the effect low light has on viewing.

*To adapt the player for other electrical currents, use both a voltage transformer and a frequency converter. Otherwise, you may damage the player.

Player controls

Focus control


If you need to sharpen the image, simply turn this control back and forth. As shown below, it is in the recess for the carrying handle.

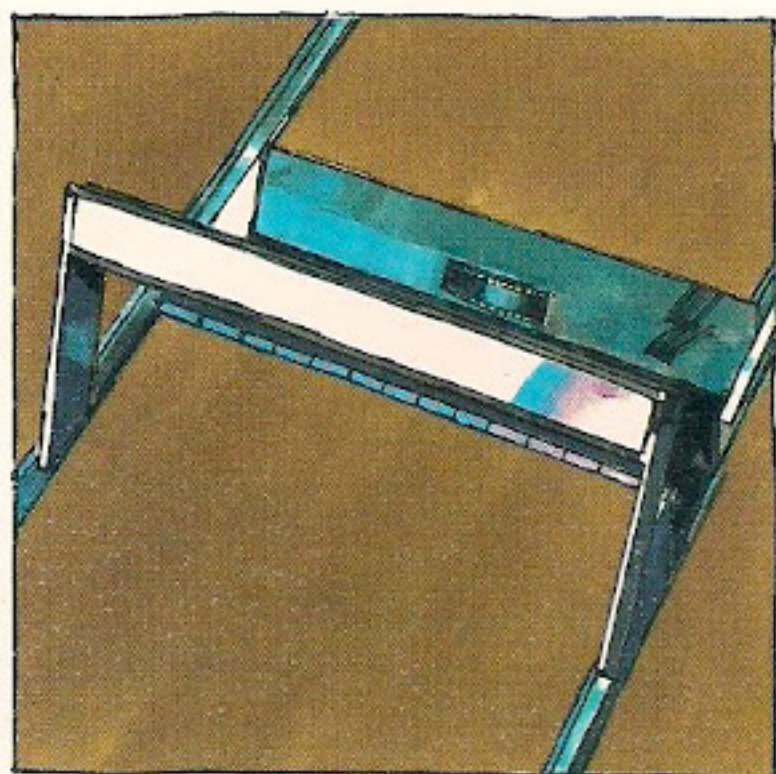

Eject button


If you select the wrong cassette for viewing, you can eject it by pressing the red button under the rear door.

However, never eject a cassette while it is playing for the first time. Let it run uninterrupted. Otherwise, you may lose the images on that cassette.

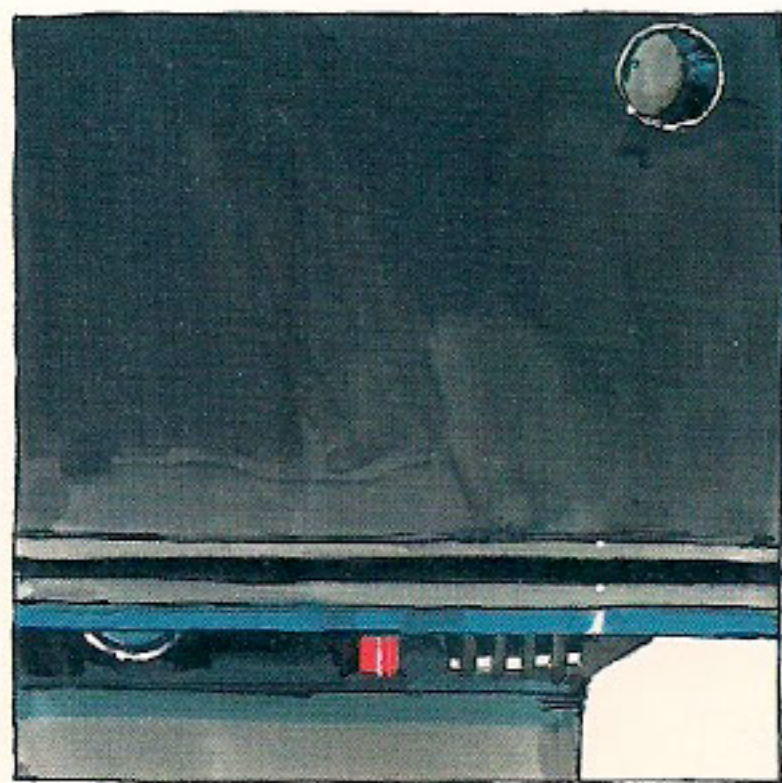


Framing control

You'll rarely need to use the framing control under the rear door.

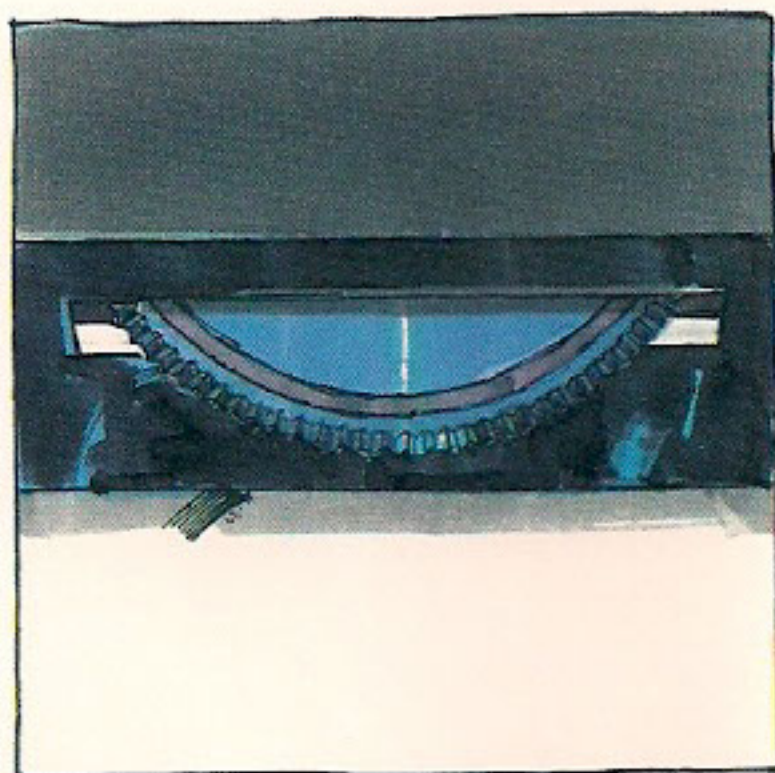

However, if a line splits the bottom of the image as shown, roll the control to the left (when facing the screen) until the line disappears. If the image is split on top, roll the control to the right.

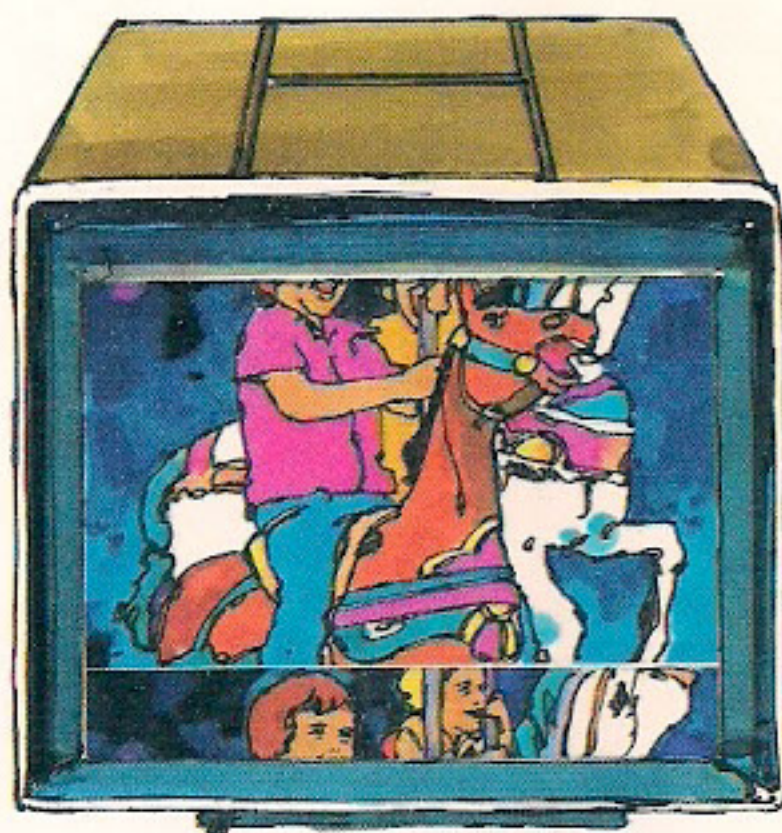

If you believe your player needs repair

Before you do anything else, call Polaroid Customer Service and explain the problem. You may be able to use your player again right away, without repair.

Call toll free...


800- 225-1384

from anywhere in the continental U.S.A. except Massachusetts. From Massachusetts and Canada, call collect—(617) 864-4568. Our Customer Service representatives can be reached every weekday from 8 a.m. to 5 p.m., your local time.

How to care for your player

Keep the cassette compartment clean. When not using your player, close the cassette compartment cover to help prevent dust and dirt from collecting inside.

If dirt should collect on the raised surface at the bottom of the compartment (marked in light red below), unplug the player. Then remove the dirt with a cotton swab dampened with water.

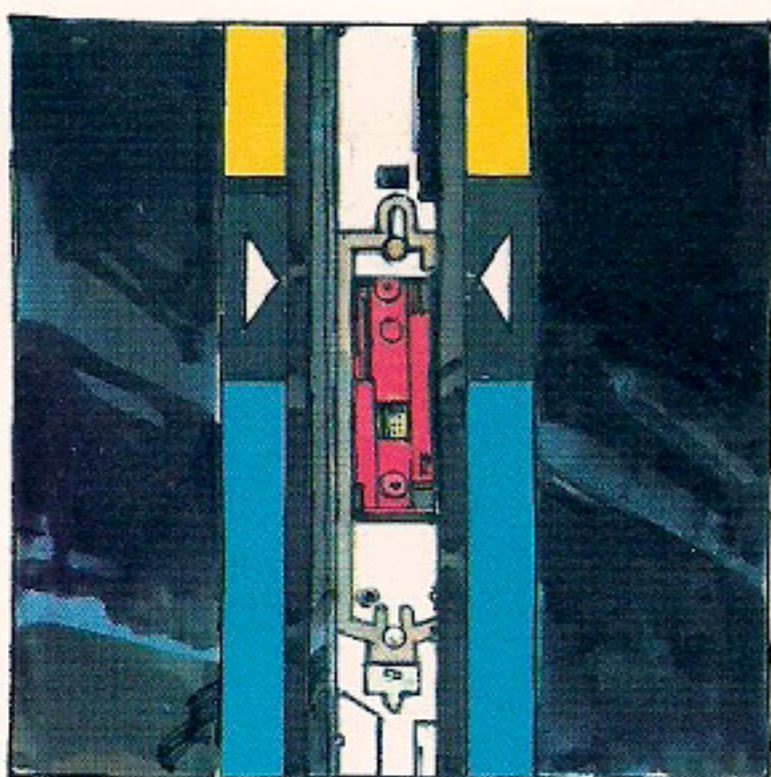

Be careful not to block the air vents in back. Air must be allowed in to cool the player while it is running.

If you need to clean the viewing screen. Use a clean, soft cloth dampened with water. Add to this a mild, non-abrasive soap for stubborn deposits and fingerprints.

Follow these instructions carefully. Other cleaning materials can damage the surface of the screen.

If this happens after you insert a cassette...

The image appears fuzzy.

Here's what to do...

- Use the focus control described on page 3. If this doesn't sharpen the image, wait for the cassette to pop up and the player to shut off. Then unplug the player and check the bottom of the cassette compartment. It may need to be cleaned; see page 4.

If you've cleaned the cassette compartment and the image is still fuzzy, the camera lens may have been set incorrectly when the scene was taken.

The player does not start.

- Check to be sure the plug is fully inserted into the outlet and the cassette is pushed down all the way.

If the player still does not start, test the outlet by plugging in a lamp. If the outlet is live, there may be something wrong with the player. Don't try to remove the cassette; call Customer Service.

The player runs but the screen remains dark.

- Wait for the cassette to pop up and the player to shut off.

If the player doesn't shut off within 5 minutes, eject and remove the cassette. Then call Customer Service.


If the cassette pops up and the player shuts off when it should, replay the cassette. If the screen still remains dark, you may have to change the projection lamp. The label inside the rear door shows how.

The plug is accidentally pulled from the outlet or you lose power.

- Don't try to remove the cassette. When you regain power, wait for the cassette to pop up and the player to shut off.

Instant Replay Control #4601

Press the button on this control and the scene you just watched replays in seconds. This fun accessory plugs into the back of your player. It is available through your Polavision player dealer.

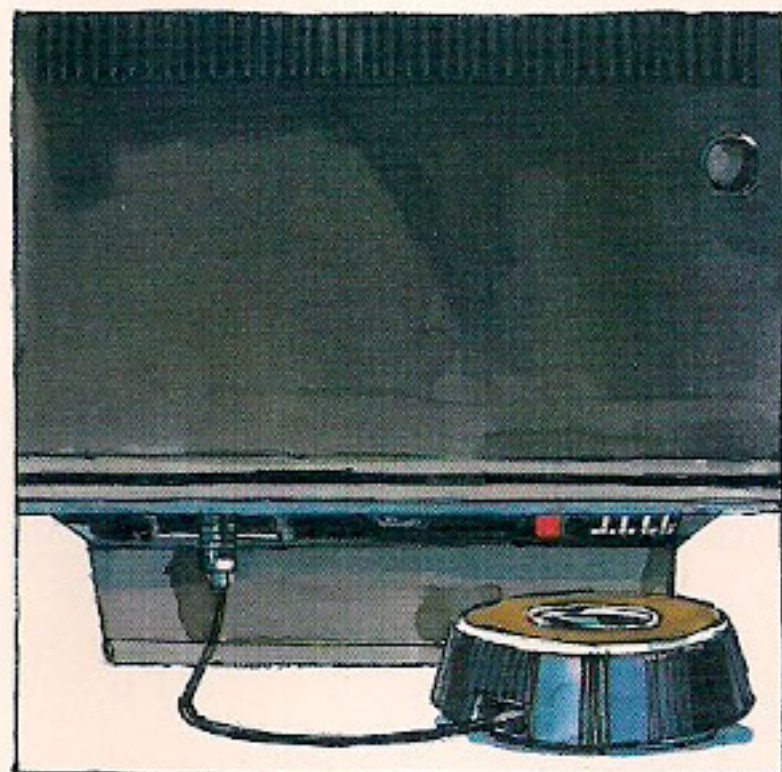

Full one-year warranty (lamp excluded)

If your player proves to be defective within the warranty period we will repair it or at our option replace it with a similar one without charge. The warranty applies whether you do or do not return the registration card to us.

The warranty period is one year from the original date of purchase. **To verify the warranty period, you should keep the sales slip or other proof of the purchase date.** Without this information, the warranty period is two years from the date of manufacture as indicated by the player's serial number.

If, within the warranty period, your player is sent to us for service, we will provide either no-charge shipment or a refund approximately equal to surface shipment cost. We will also give you a free cassette to replace any cassette damaged by the player, provided that the damaged cassette is returned to us.

This warranty does not cover the lamp (covered by the lamp manufacturer's replacement policy), or any damage caused by accident, misuse, or tampering with the player, and a charge will be made for such repairs.

For warranty service: The player must be returned to and repaired by a Polaroid Service Center or Authorized Service Center. (**Note:** Special arrangements have been made for pickup service through a Polavision player dealer or direct. For information, call the Customer Service number on page 4.)

This warranty gives you specific legal rights, and you may also have

other rights which vary from state to state.

This warranty excludes all consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you.

THIS PRODUCT IS APPROVED BY UNDERWRITERS' LABORATORIES, INC. (UL). AS A CONDITION OF APPROVAL, UL REQUIRES THAT BASIC SAFETY INFORMATION BE PROVIDED.

IMPORTANT SAFEGUARDS

AS WITH ANY ELECTRICAL UNIT, OBSERVE THESE BASIC SAFETY PRECAUTIONS:

1. FOLLOW ALL INSTRUCTIONS.
2. CLOSELY SUPERVISE UNIT WHEN IT IS OPERATING AND WHEN IT IS BEING USED BY OR NEAR YOUNG CHILDREN.
3. UNPLUG UNIT AND LET IT COOL FOR 10 MINUTES BEFORE CHANGING PROJECTION LAMP TO PREVENT THE POSSIBILITY OF A BURN.
4. DO NOT USE UNIT IF CORD IS DAMAGED OR IF UNIT HAS BEEN DROPPED OR DAMAGED—UNTIL QUALIFIED SERVICEMAN HAS EXAMINED IT.
5. ARRANGE CORD SO IT WILL NOT BE TRIPPED OVER OR PULLED. DO NOT LET CORD TOUCH HOT SURFACES. USE ONLY EXTENSION CORDS WITH AT LEAST A 3 AMP. RATING. CORDS RATED FOR LESS MAY OVERHEAT.
6. UNPLUG UNIT WHEN NOT USING IT. GRASP PLUG, NOT CORD, AND PULL TO DISCONNECT PLUG FROM OUTLET. STORE CORD IN AREA PROVIDED.
7. TO AVOID ELECTRICAL SHOCK HAZARDS, DO NOT IMMERSE UNIT IN WATER OR OTHER FLUIDS. DO NOT DISASSEMBLE UNIT; IT SHOULD BE REPAIRED ONLY BY QUALIFIED SERVICEMAN. INCORRECT REASSEMBLY CAN CAUSE ELECTRICAL SHOCK HAZARD WHEN UNIT IS USED AGAIN.

KEEP THESE INSTRUCTIONS